

KM-3650W



The KM-3650W uses a **mechanical counter** located on the front right hand side of the machine.

Your meter reading can be taken directly from this counter.

