

KM-C2630D

 


The KM-C2630D uses an **electronic counter** to record the copy counts. This can be read off the LCD display or printed out in a report.


Use the following steps to check the electronic copy count or print the report.

Note: you need to report the totals for Monochrome, Mono Colour and Full Colour.

STEP 1 Press the **Default Setting / Counter** button on the Operator Panel. The default screen will appear on the display

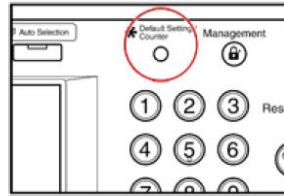

 STEP 2 Press the **Counter Check** button on the touch display. The total number of copies will be displayed.

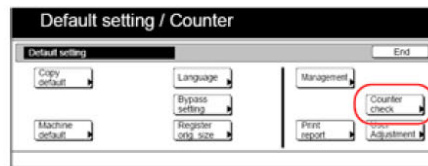

STEP 3 To print the Counter Report press the **PRINT REPORT** key on the display.

Counter check				
Number print:				
Black & White:	Copy	Printer	Fax	Total
	1,072	0	1	1,073
Monochrome:	0	0	0	0
Full-colour:	601	1	0	602
Total:	1,673	1	1	1,675
Num. of pages				
Original:	Copy	scanner	Fax	Total
	774	2,194	1	2,969

STEP 4 Press the **CLOSE** key on the touch screen to return to normal COPY mode.

Counter check				
Number print:				
Black & White:	Copy	Printer	Fax	Total
	1,072	0	1	1,073
Monochrome:	0	0	0	0
Full-colour:	601	1	0	602
Total:	1,673	1	1	1,675
Num. of pages				
Original:	Copy	scanner	Fax	Total
	774	2,194	1	2,969