

KM-C3225




The KM-C2520, KM-C3225 and KM-C3232 Copiers use an **electronic counter** to record the copy counts. This can be read off the LCD display or printed out in a report.


Use the following steps to check the electronic copy count or print the report.

Note: you need to report the totals for Monochrome, Mono Colour and Full Colour.

- STEP 1** Press the **System Menu / Counter** button on the Operator Panel. The default screen will appear on the display

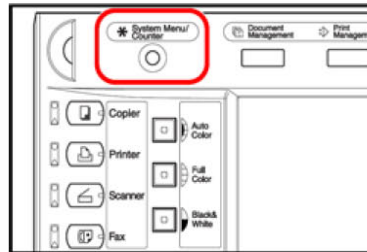

- STEP 2** Press the **Check the Counter** button on the touch display. The total number of copies will be displayed.

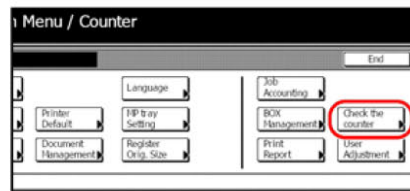

- STEP 3** To print the Counter Report press the **PRINT REPORT** key on the display.

Counter check				
Number print	Copy	Printer	Fax	Total
Black & White	1,672	0	1	1,673
Monocolor	0			0
Full-colour	601	1		602
Total	1,673	1	1	1,675
Num. of pages				
Original	774	2,194	1	2,969

- STEP 4** Press the **CLOSE** key on the touch screen to return to normal COPY mode.

Counter check				
Number print	Copy	Printer	Fax	Total
Black & White	1,672	0	1	1,673
Monocolor	0			0
Full-colour	601	1		602
Total	1,673	1	1	1,675
Num. of pages				
Original	774	2,194	1	2,969