

Section 10 MAINTENANCE AND OPERATION INFORMATION

1. Cleaning the copier


CAUTION

For safety purposes, ALWAYS remove the power plug from the outlet when performing cleaning operations.

● Cleaning the original cover

Lift open the original cover. Wipe the back side of the original cover with a soft cloth dampened with alcohol or a mild detergent.


* Never use thinner or other organic solvents for this purpose.

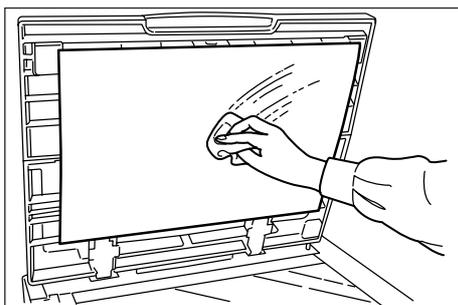

● Cleaning the platen


Lift open the original cover. Wipe the platen with a soft cloth dampened with alcohol or a mild detergent.

* Never use thinner or other organic solvents for this purpose.

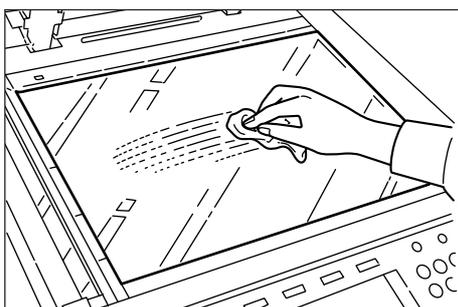

* If soiling, such as black lines appear on the copy while using the optional Document Processor, the slit glass (a) is soiled. Wipe the slit glass with a soft dry cloth.

* Never use water, thinner, organic solvents or alcohol.

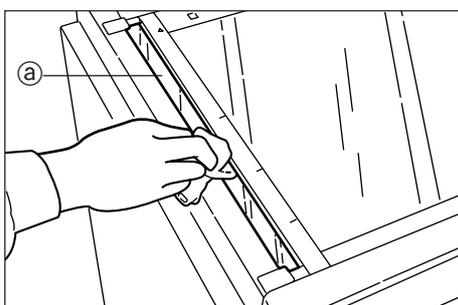


● Cleaning the separator

NOTE

To keep the best copying quality, perform cleaning periodically (approximately once a month) using the following procedure.

1 Open the front cover.

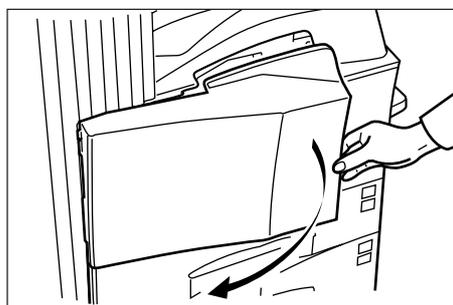


NOTE

When the slit glass becomes dirty, "Clean the slit glass for original fed from DP." ["Clean the slit glass for original fed."] may appear. In this case, perform the cleaning operation on the slit glass and then touch the "End" key.

Inch specifications

 Clean the slit glass for original fed from DP.

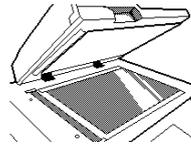


1. Open the document processor.
2. Clean the surface of narrower glass located at left with a dry cloth.
3. Please close the document processor.
4. Press END key

If the slit glass is dirty, black line will appear on the copy.

Metric specifications

 Clean the slit glass for original fed.

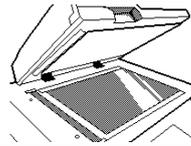


1. Open the document processor.
2. Clean the surface of narrower glass located at left with a dry cloth.
3. Please close the document processor.
4. Press END key


If the slit glass is dirty, black line will appear on the copy.

Section 10 MAINTENANCE AND OPERATION INFORMATION


- 2** Remove the cleaning brush.

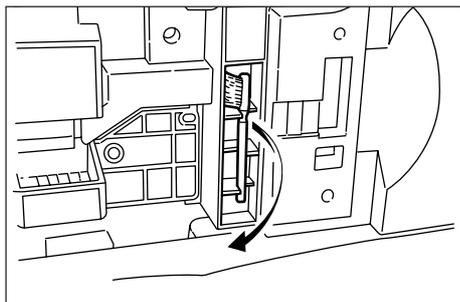

- 3** Pull up the left cover 1 handle to open the left cover 1.

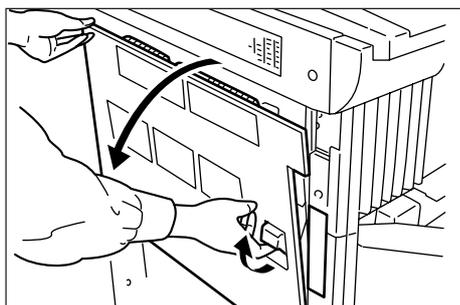

- 4** Clean the separator by moving the cleaning brush from left to right several times along with the separator.

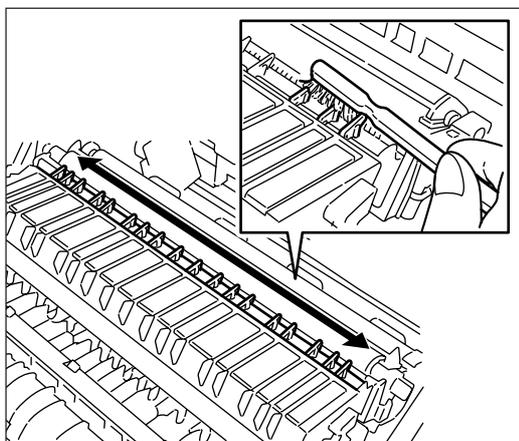


- 5** Close the left cover 1.

● Cleaning the transfer roller


- 1** Open the front cover.




- 2** Remove the cleaning brush.

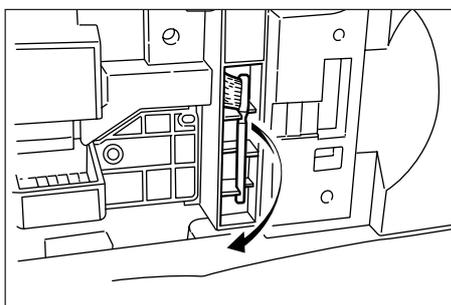

- 3** Pull up the left cover 1 handle to open the left cover 1.

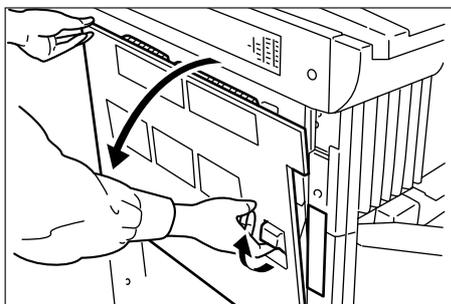

- 4** While rotating the gear as shown, clean the transfer roller by moving the cleaning brush from left to right along with the transfer roller.

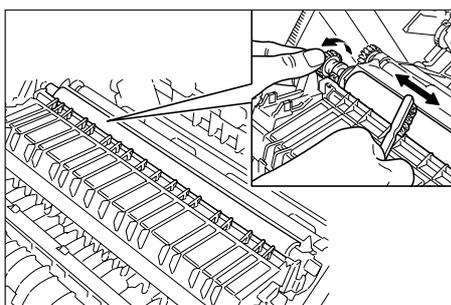

- 5** Close the left cover 1.