



KYOCERA Document Solutions
A.B.N. 77 003 852 444
Level 3, 6-10 Talavera Road
North Ryde NSW 2113
TEL: (02) 9888 9988
Fax: (02) 9888 9588
SERVICE: 13 5962
www.kyoceradocumentsolutions.com.au




The FS-1370DN uses an electronic counter to record the copy counts. This can be read off the LCD display.


Please use the following steps to check the electronic counts.

Step 1 Press the MENU button on the printer front panel

Step 2 Press the **UP** or **DOWN** button on the printer front panel until Counter > appears.

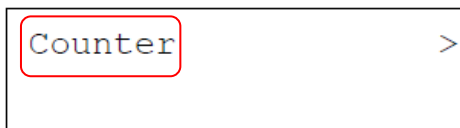

Step 3 Press **Right**. > **Printed Pages** appears as the total number of pages printed.

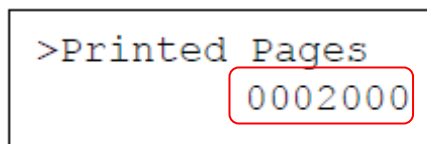

Step 4 Press **Menu**. The display returns to Ready.