



KYOCERA Document Solutions
A.B.N. 77 003 852 444
Level 3, 6-10 Talavera Road
North Ryde NSW 2113
TEL: (02) 9888 9988
Fax: (02) 9888 9588
SERVICE: 13 5962
www.kyoceradocumentsolutions.com.au




The FS 2000D / 3900DN / 4000DN uses an electronic counter to record the copy counts. This can be read off the LCD display.

Please use the following steps to check the electronic counts.


Step 1 Press the MENU button on the printer front panel

Step 2 Press the **UP** or **DOWN** button on the printer front panel until **Life Counter >** appears.

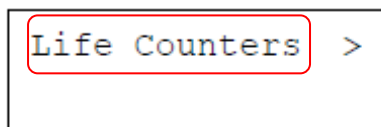

Step 3 Press **Right**

Step 4 Press the **UP** or **DOWN** button on the printer front panel until **Printed Pages>** appears. The latest print count is shown

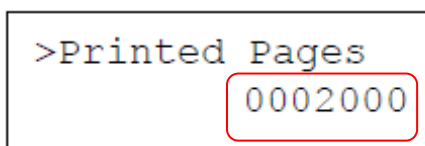

Step 5 To exit the selection, Press **Menu**